



1 Make sure the AC mains plug is not connected



2 Attach the red (+) battery clip to the red (+) post on the battery



3 Attach the black (-) battery clip to the black (-) post on the battery



4 Connect plug to AC mains power



5 The battery is charged when the 'Fully Charged' LED is light



6 Disconnect AC mains plug



7 After charging disconnect the red (+) positive clip followed by the black (-) clip



RCB 106

Output Current:
6amp (RMS)
4amp (DC)

Input Voltage:
220-240v AC

Output Voltage:
12v DC

Minimum Battery
Capacity: 20AH

Maximum Battery
Capacity: 70AH

Warning: Read instructions carefully before charging.
Charge in a well ventilated area.

RING
Automotive

Distributed by: Ring Automotive Limited Gelderd Road, Leeds, England LS12 6NA
Tel: +44 (0)113 213 2000 Fax: +44 (0)113 231 0266
Email: autosales@ringautomotive.co.uk Web: www.ringautomotive.co.uk

